


## Breakdown Sheet


### Needle Scaler – Pistol Grip

#### Model 95510 Needle Scaler Instructions & Parts

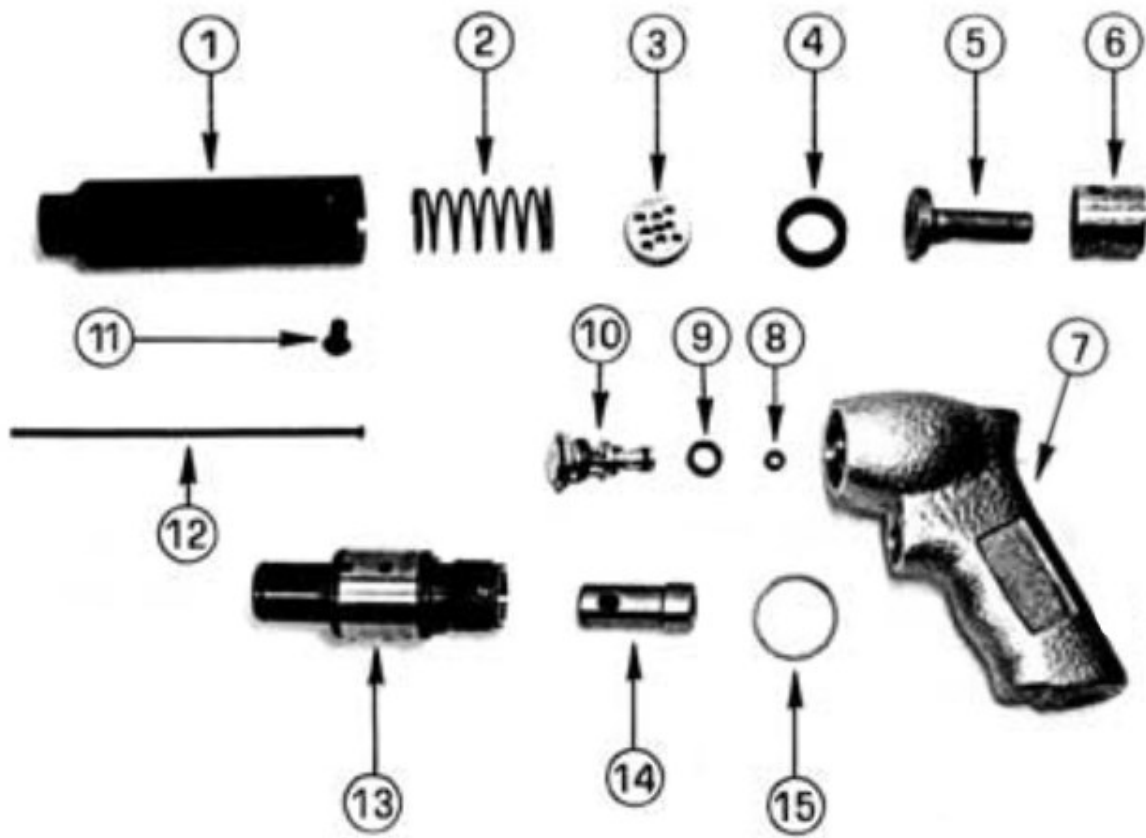

| Item | Part Number | Description       | Item | Part Number | Description       |
|------|-------------|-------------------|------|-------------|-------------------|
| 1    | 95501       | Housing           | 9    | 91300       | Large Rubber Seal |
| 2    | 95505       | Spring            | 10   | 90500       | Trigger Assembly  |
| 3    | 95504       | Needle Holder     | 11   | 95507       | Screw (2 Req.)    |
| 4    | 95503       | Cushion           | 12   | 250027      | Needle (Set of 9) |
| 5    | 95502       | Driver            | 13   | 93100       | Barrel            |
| 6    | 95506       | Spacer Ring       | 14   | 90300       | Piston            |
| 7    | 90100       | Pistol Grip       | 15   | 92500       | Locking Washer    |
| 8    | 91301       | Small Rubber Seal |      |             |                   |


**Model 95520 Needle Scaler Vacuum Adapter**  
**Instructions & Parts**  
**(For Models 95510 & 95511)**

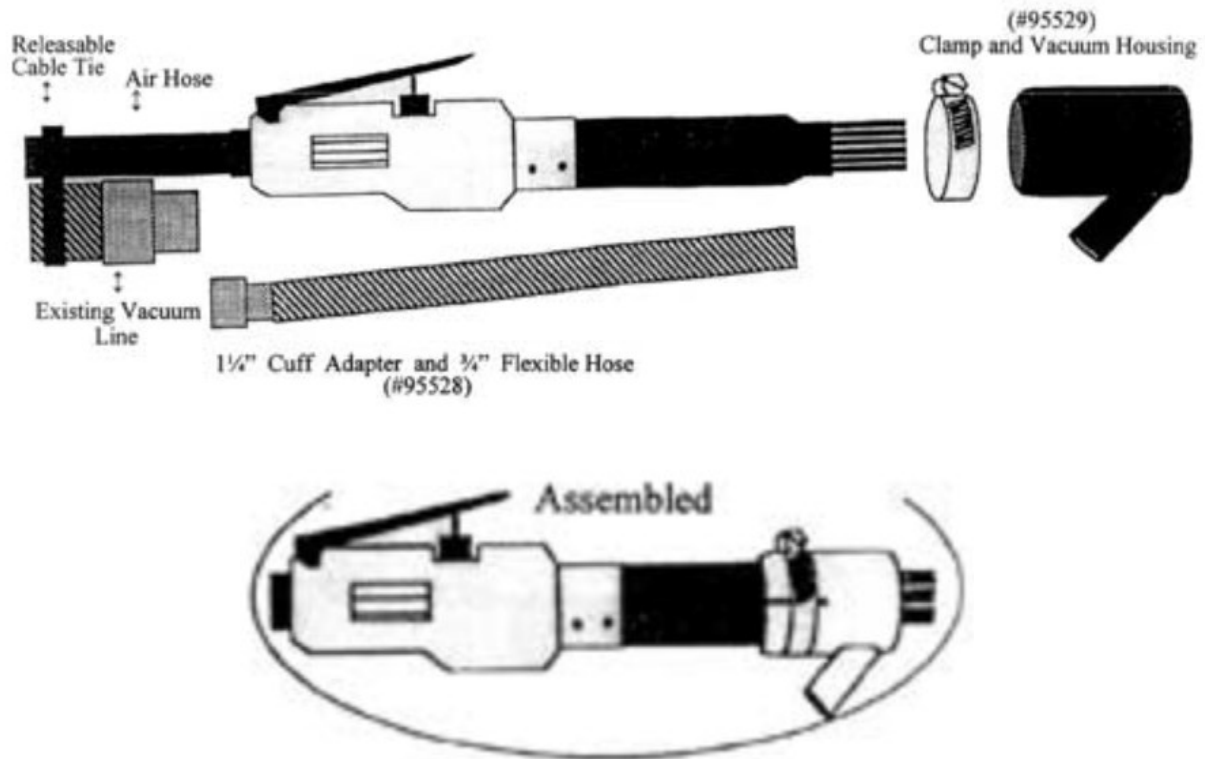

**Parts Provided**

| Part Number | Description                                                                             |
|-------------|-----------------------------------------------------------------------------------------|
| 95529       | Clamp<br>Vacuum Housing                                                                 |
| 95528       | $\frac{3}{4}$ " Flexible Hose<br>1 $\frac{1}{4}$ " Cuff Adapter<br>Releasable Cable Tie |

**Model 95525 Needle Scaler Chisel Adapter**  
**Instructions & Parts**  
**(For Models 95510 & 95511)**

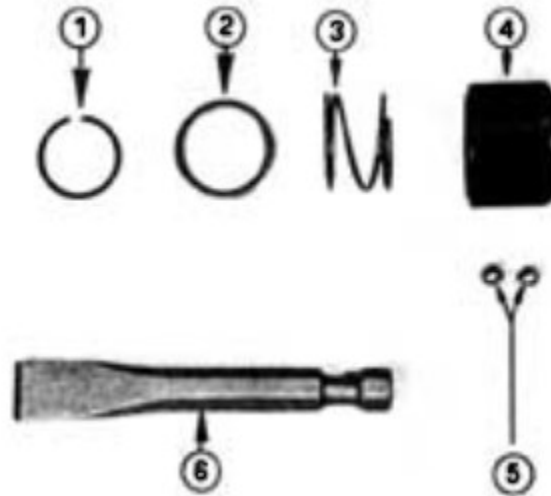

| Item | Part Number | Description   |
|------|-------------|---------------|
| 1    | 91200       | Retainer Ring |
| 2    | 93300       | Washer        |
| 3    | 93200       | Spring        |
| 4    | 93400       | Collar        |
| 5    | 91500       | Steel Ball    |
| 6    | 10400       | Flat Chisel   |

**Instructions**

1. Remove set screw from model 95510 or 95511.
2. Remove the complete needle scaler from the front of the hammer barrel, including the driver and spacer ring.
3. Install (2) steel balls.
4. Put on the collar, spring, washer, and retainer.